


Initial Setup Procedure

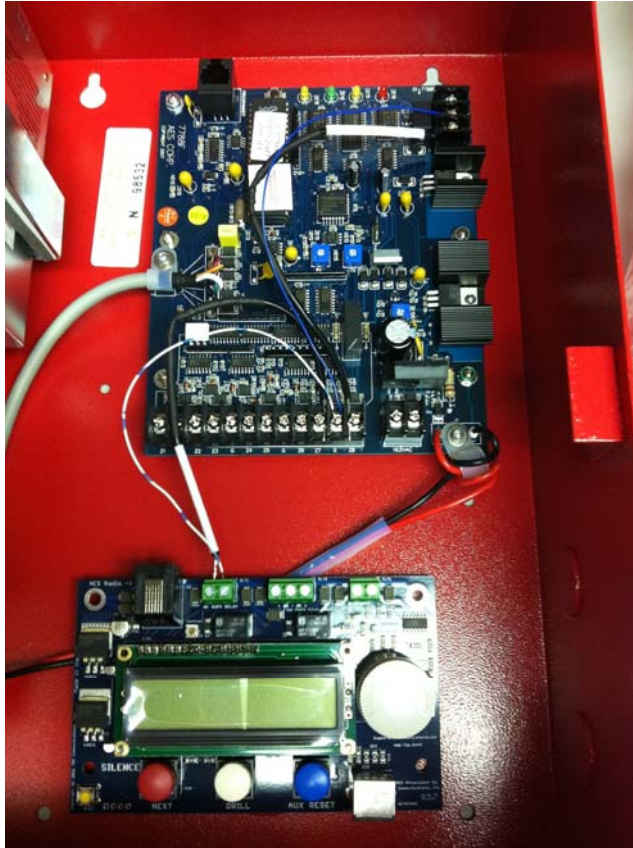

Connect EOL Resistor between **ALM1** and **Z7**.
Connect Wire between **ALM1** and **G**.

Connect EOL Resistor between **J4-C** and **Z8**.
Connect Wire between **J4-NC** and **G**.

Mount Annunciator on Stand-offs.



Connect Keyboard and press **Enter** for Programming Mode.

Arrow Down to edit Zone Text (press Enter).

Set Zone 7 Text to "**Annunciator**".

Set Zone 8 Text to "**Antenna Failure**".

Press **Esc** to exit Zone Programming.



Arrow Down to **J4 Zone #**.

Press **8** to set Zone # to 8.